

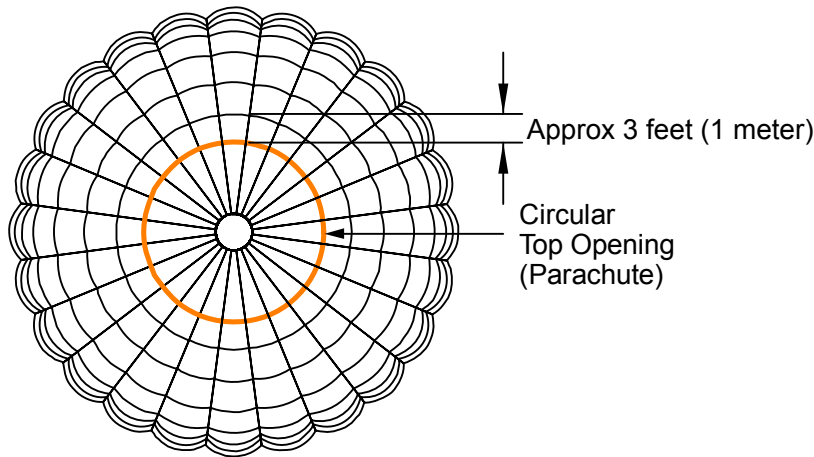


Instruction for mounting the TT34 temperature transmitter

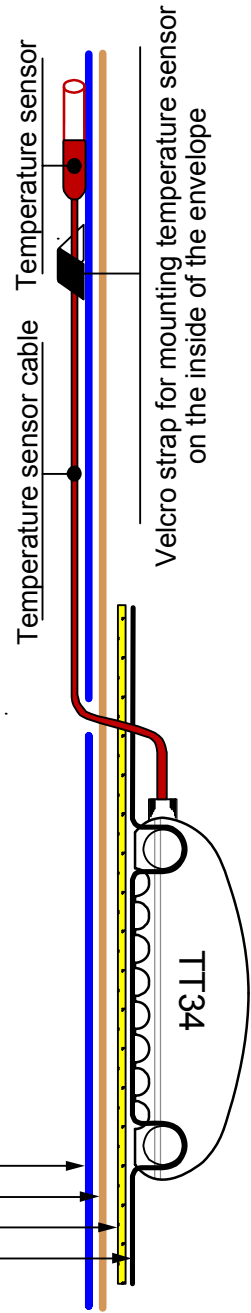


The temperature transmitter must be mounted approximately 3 feet underneath the top opening (parachute) outside of the envelope

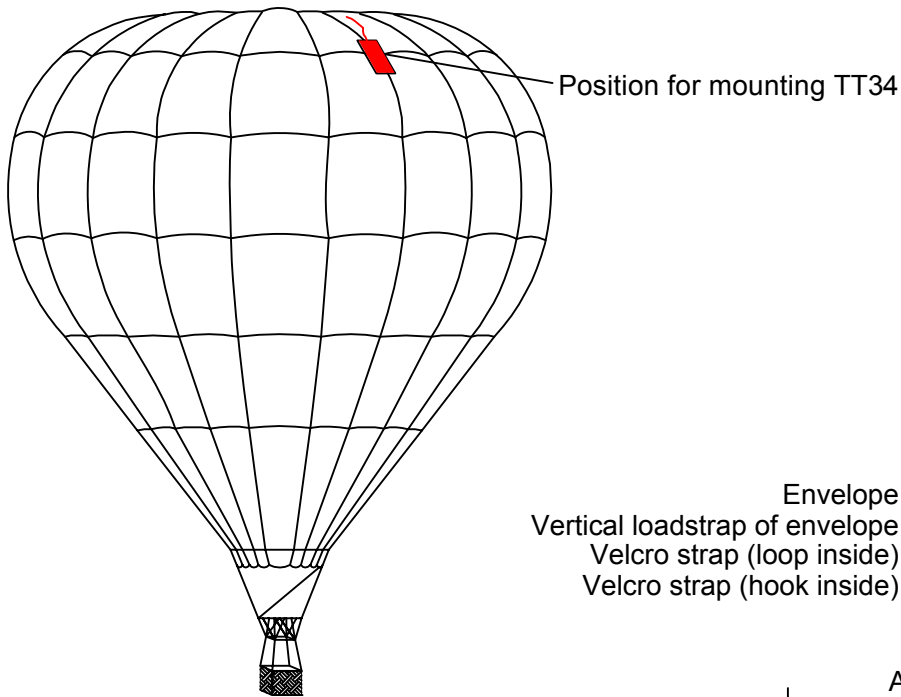

Envelope
Vertical loadstrap of envelope
Velcro strap (loop inside)
Velcro strap (hook inside)

Approx 4 - 6 inches

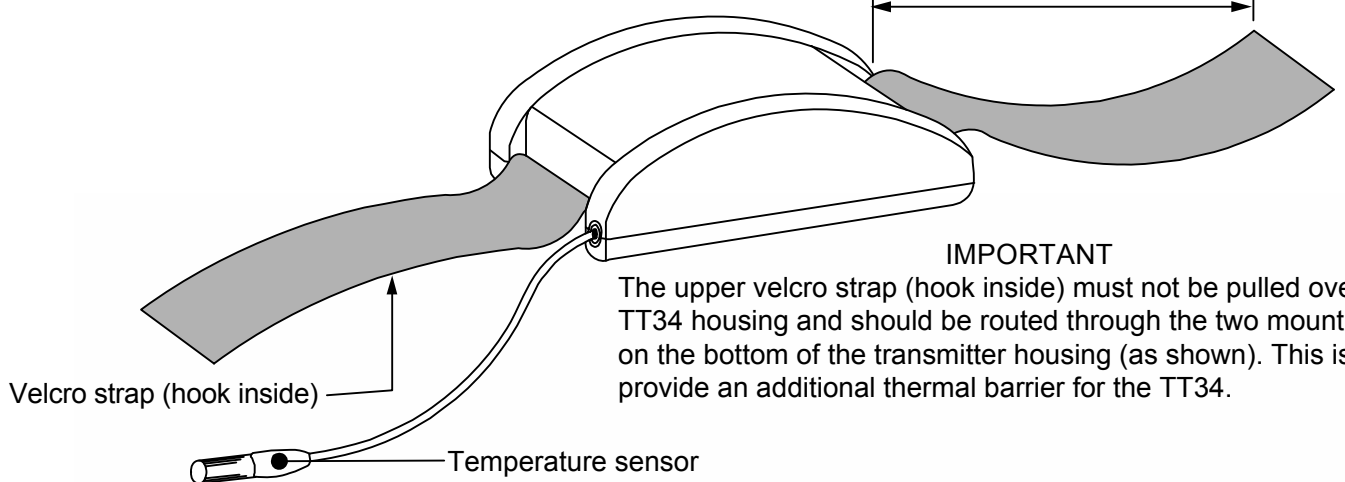

IMPORTANT

The upper velcro strap (hook inside) must not be pulled over the TT34 housing and should be routed through the two mounting rolls on the bottom of the transmitter housing (as shown). This is to provide an additional thermal barrier for the TT34.